

APP CRS  
198°

Rwy Idg  
TDZE  
Apt Elev

4400  
15  
15


RNAV (GPS) RWY 20  
KOTLIK (2A9) (PFKO)

NA

DME/DME RNP-0.3 NA. Use Emmonak altimeter setting.  
Procedure NA at night.

MISSED APPROACH: Climb to 8000 direct RICVO WP and hold.

|                   |                            |                           |               |
|-------------------|----------------------------|---------------------------|---------------|
| AWOS-3PT<br>118.1 | ENM/PAEM AWOS-3P<br>135.35 | ANCHORAGE CENTER<br>124.5 | CTAF<br>122.9 |
|-------------------|----------------------------|---------------------------|---------------|

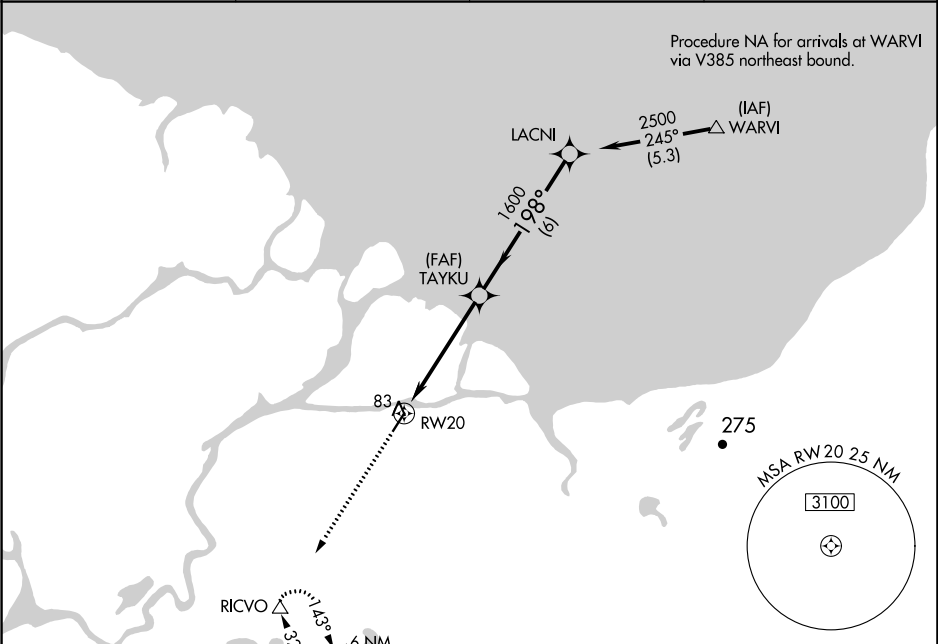

ELEV 15

TDZE 15

8000

RICVO

△

RW20

TAYKU

LACNI

2500

1600

198°

2.91°

TCH 40

5 NM

6 NM

Procedure Turn NA

| CATEGORY | A     | B           | C  | D |
|----------|-------|-------------|----|---|
| RNAV MDA | 440-1 | 425 (500-1) | NA |   |
| CIRCLING | 480-1 | 465 (500-1) | NA |   |

MIRL Rwy 2-20