
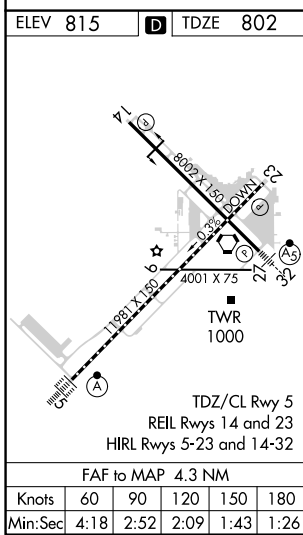


VORTAC FWA 117.8 Chan 125	APP CRS 145°	Rwy Idg TDZE Apt Elev	8001 802 815
---	------------------------	-----------------------------	---

VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75

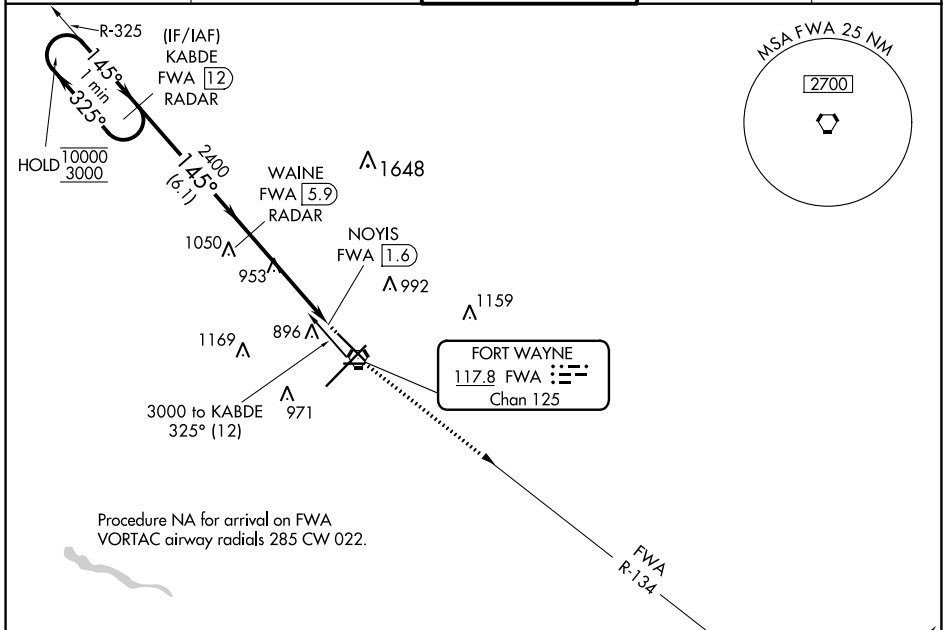

One Minute Holding Pattern	KABDE FWA 12 RADAR	WAINE FWA 5.9 RADAR	3000	OSBER	
			FWA R-134	△	
10000 ← 325°		→ 145°			
3000		2400			
		3.05° TCH 53			
		6.1 NM		3.4 NM	
		0.9		0.5	
CATEGORY	A	B	C	D	E
S-14	1280-1	478 (500-1)	1280-1½ 478 (500-1½)	1280-1½ 478 (500-1½)	1280-1¾ 478 (500-1¾)
<input checked="" type="checkbox"/> CIRCLING	1300-1	485 (500-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 22 FEB 2024 to 21 MAR 2024

EC-2, 22 FEB 2024 to 21 MAR 2024